

Bidet Installation Instructions

- 1. Install Valve Body:** (See Fig. 2)
 - Remove trim from diverter valve body.
 - Install 90° ell into threaded side outlet. Insure that the arrow stamped on the ell is facing outward (away from valve).
 - Thread "Y" to bottom of valve. Insure that fiber washer is in place inside the "Y".
 - Remove the inverted nut, nylon slip rings and one self-seating china seal from valve body. Slide valve body up through the center hole of the bidet and reinstall the china seal, nylon slip ring & inverted nut. Hand tighten to a firm seal.
- 2. Install Spray Head:** (See Fig. 1)
 - Drop the spray head through the appropriate hole in the bowl of the bidet. From underneath, install the rubber washer, then the metal washer, than the nut. Tighten firmly.
- 3. Install Pop-Up Guide:** (See Fig. 1)
 - Drop Pop-up into the appropriate hole on the rim of the bidet. From underneath, install metal washer and then the nut. Tighten firmly.
- 4. Install Pop-Up Assembly:** (See Fig. 3)
 - Apply silicon caulking on underside of flange and set in Bidet drain hole. *Do not use plumbers putty or any oil-based sealant! Use of anything other than silicon caulking will void the warranty.*
 - Install brass nut, 2 fiber washers, and rubber washer on drain rim. Screw drain rim assembly onto pop up flange.
 - Hold drain rim securely and tighten brass nut.
 - Apply teflon tape to threaded end of tailpiece and thread into bottom of the drain rim assembly.
 - Insert drain plug into drain rim, and hold in place. Insert ball into drain taking care not to overtighten the nut. Rod must move up & down freely.
 - Insert pop up rod from top of faucet through the hole in the back of spout and through the two holes in top of strap. Connect the strap to horizontal ball rod using the lock spring.
- 5. Install Valve Stems:** (Hot & cold are labeled: cold=blue & hot=red). (See Fig. 1)
 - Install bottom lock nut on valve body and insert from underside.
 - Adjust lower nut so that top of the valve allows for installation of escutcheon & handle.
 - Install 2nd lock nut from top of valve body and tighten.
 - Hand tighten escutcheon to valve bodies.
 - Attach handle & tighten with allen wrench.
- 6. Install Hoses:** (See Fig. 1)
 - Connect 24" hose to 90° ell on valve outlet to sprayhead.
 - Connect 9 3/4" supply hoses from "Y" on bottom of valve outlet to hot & cold valves.
- 7. Install Bidet Valve Trim:** (See Fig. 2)
 - Thread escutcheon tube into escutcheon.
 - Slide handle onto valve broach and tighten with supplied screw.
 - Install handle cap with arrow facing towards front of bidet.

NOTE: Flush hot and cold supply lines before connecting faucet to supply risers. Failure to do so could result in voiding of warranty.

- Connect your waste "p" trap to the tailpiece extension tube.
- Pressure test installation for leaks.

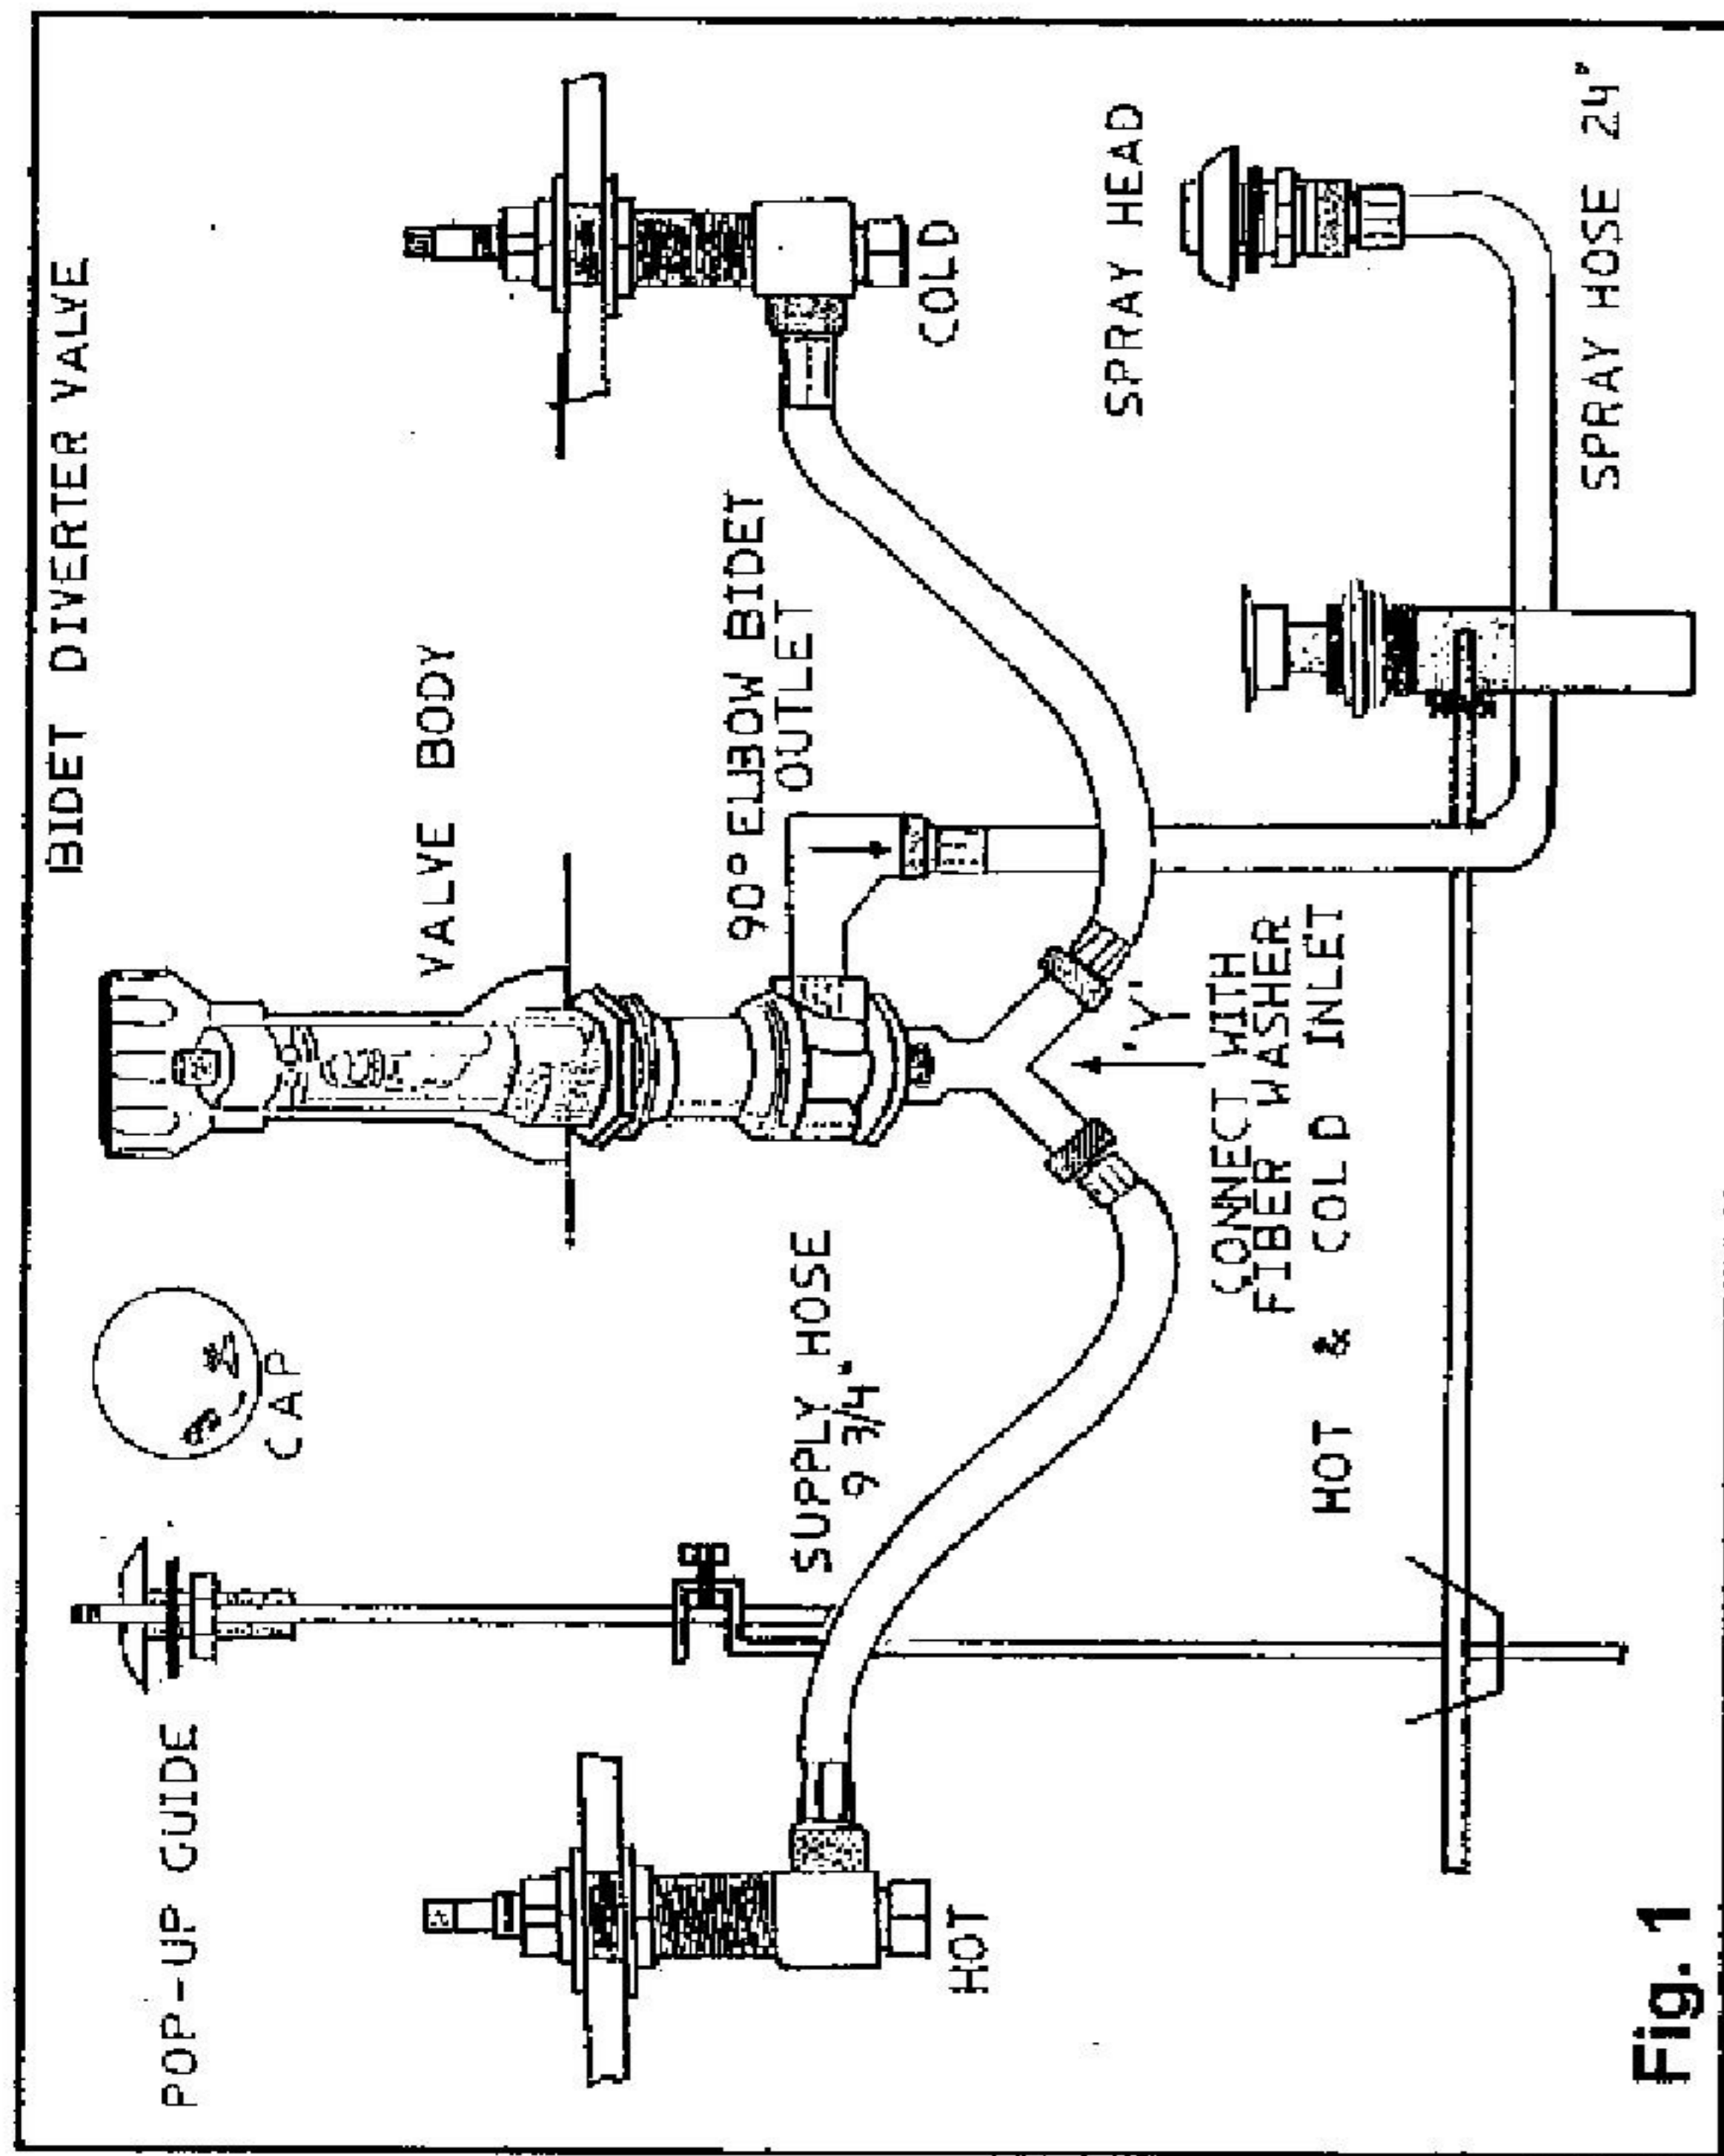


Fig. 1

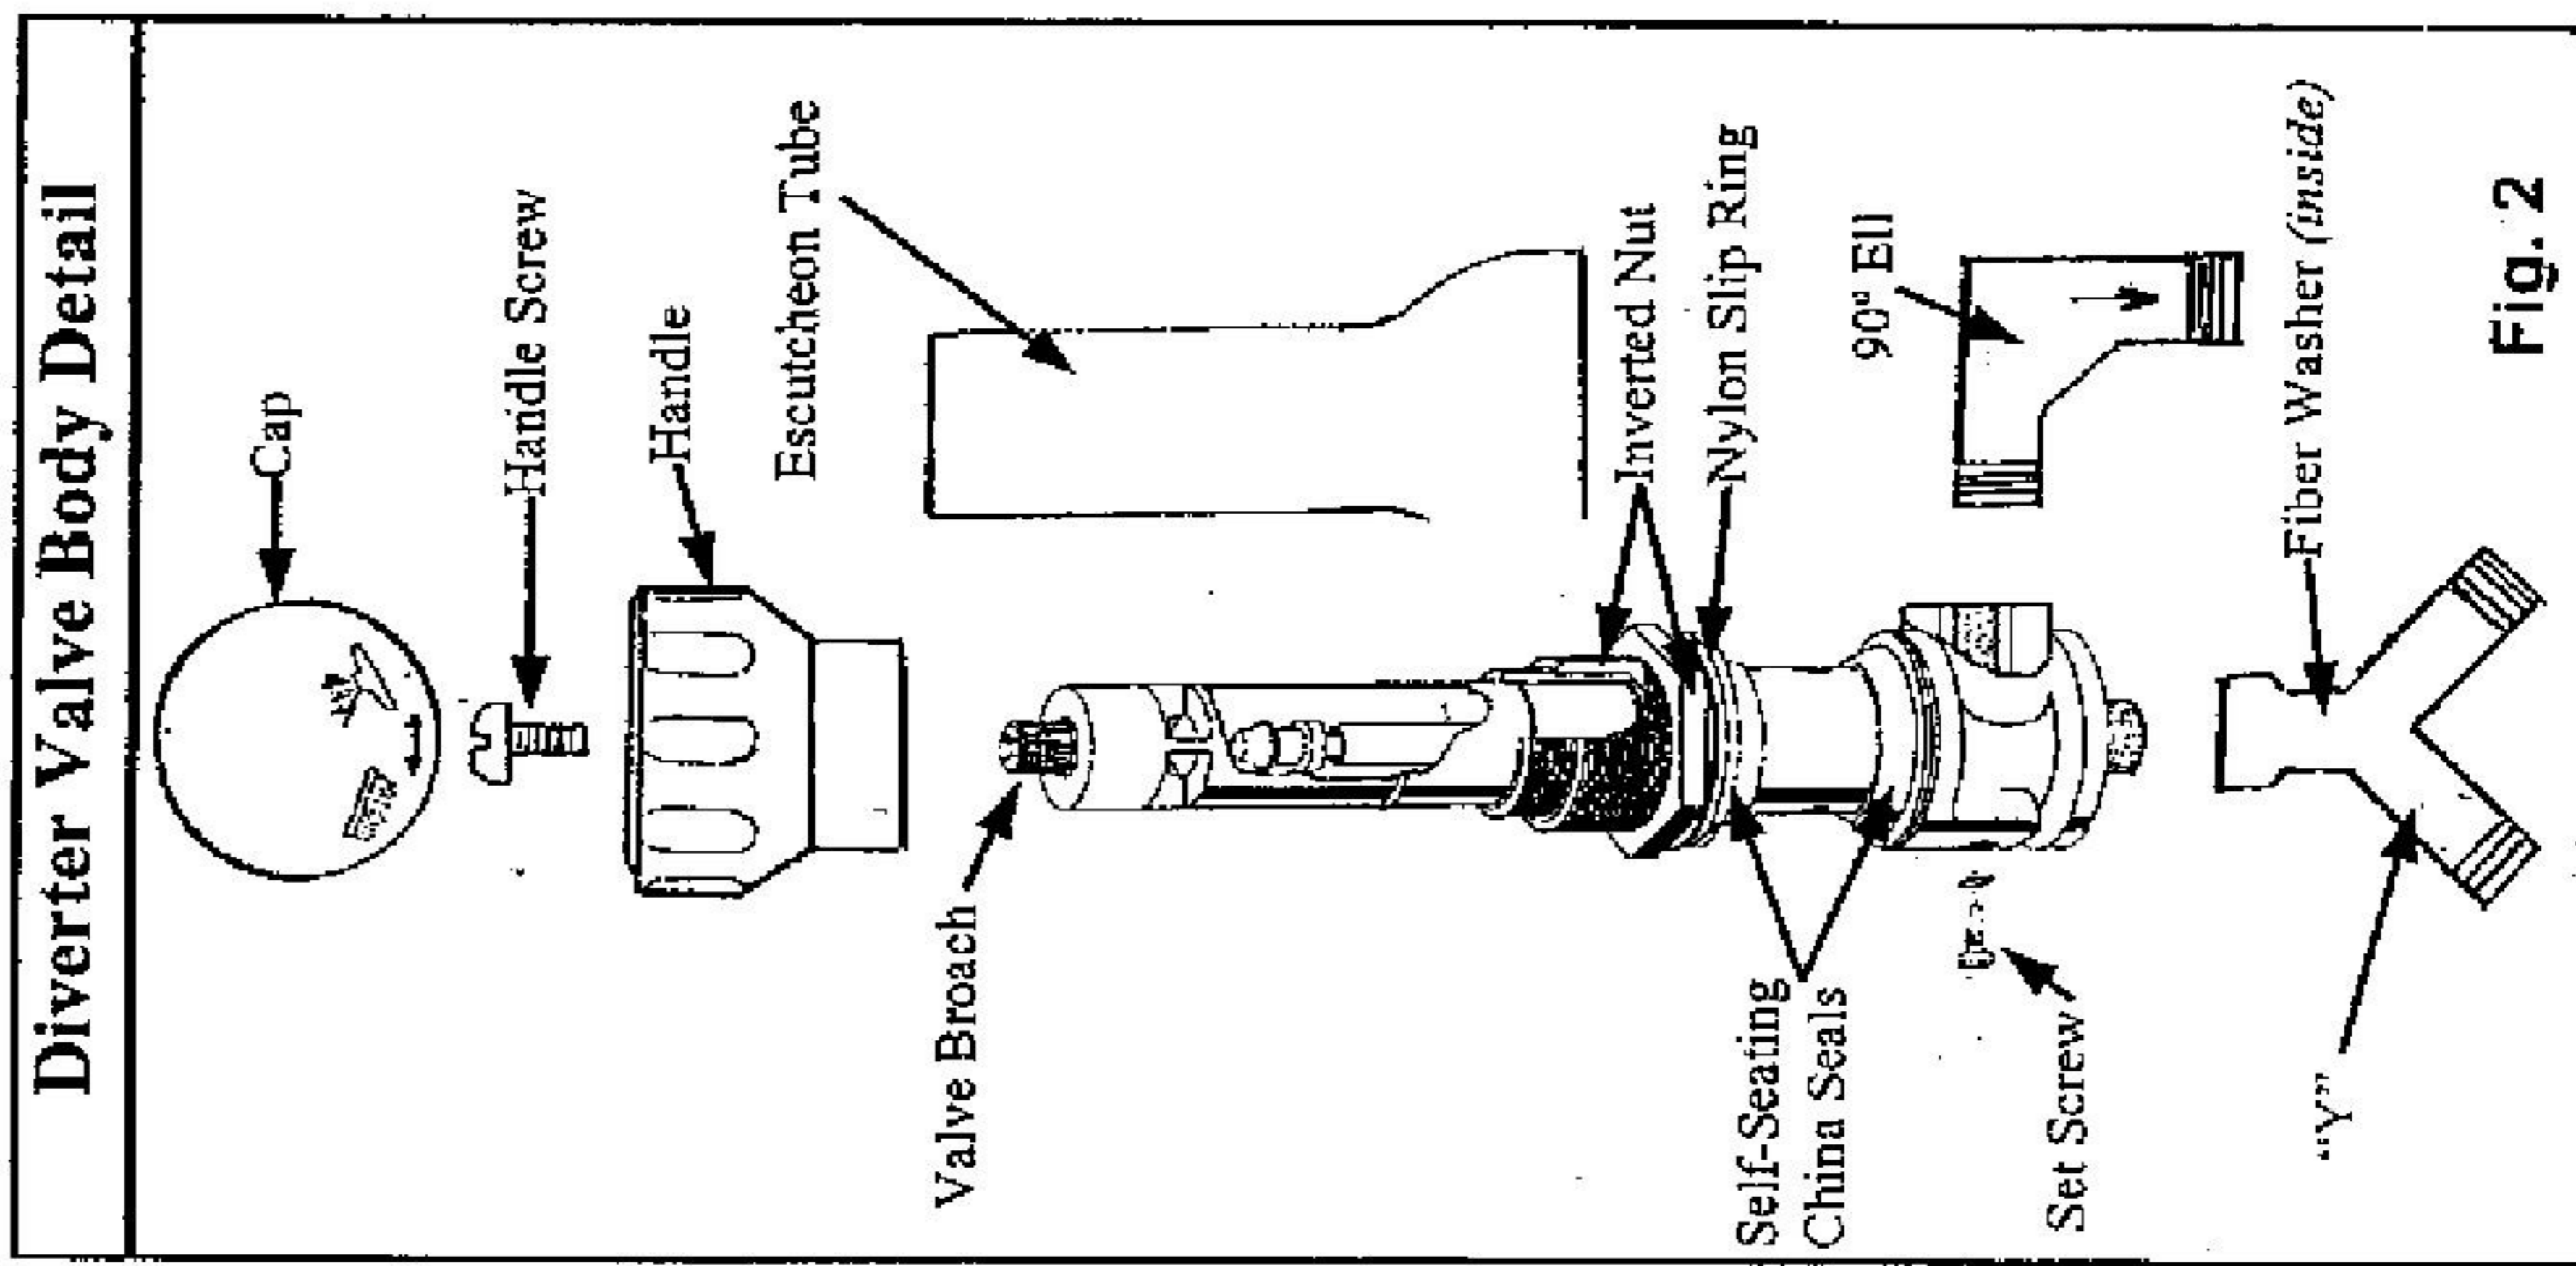


Fig. 2

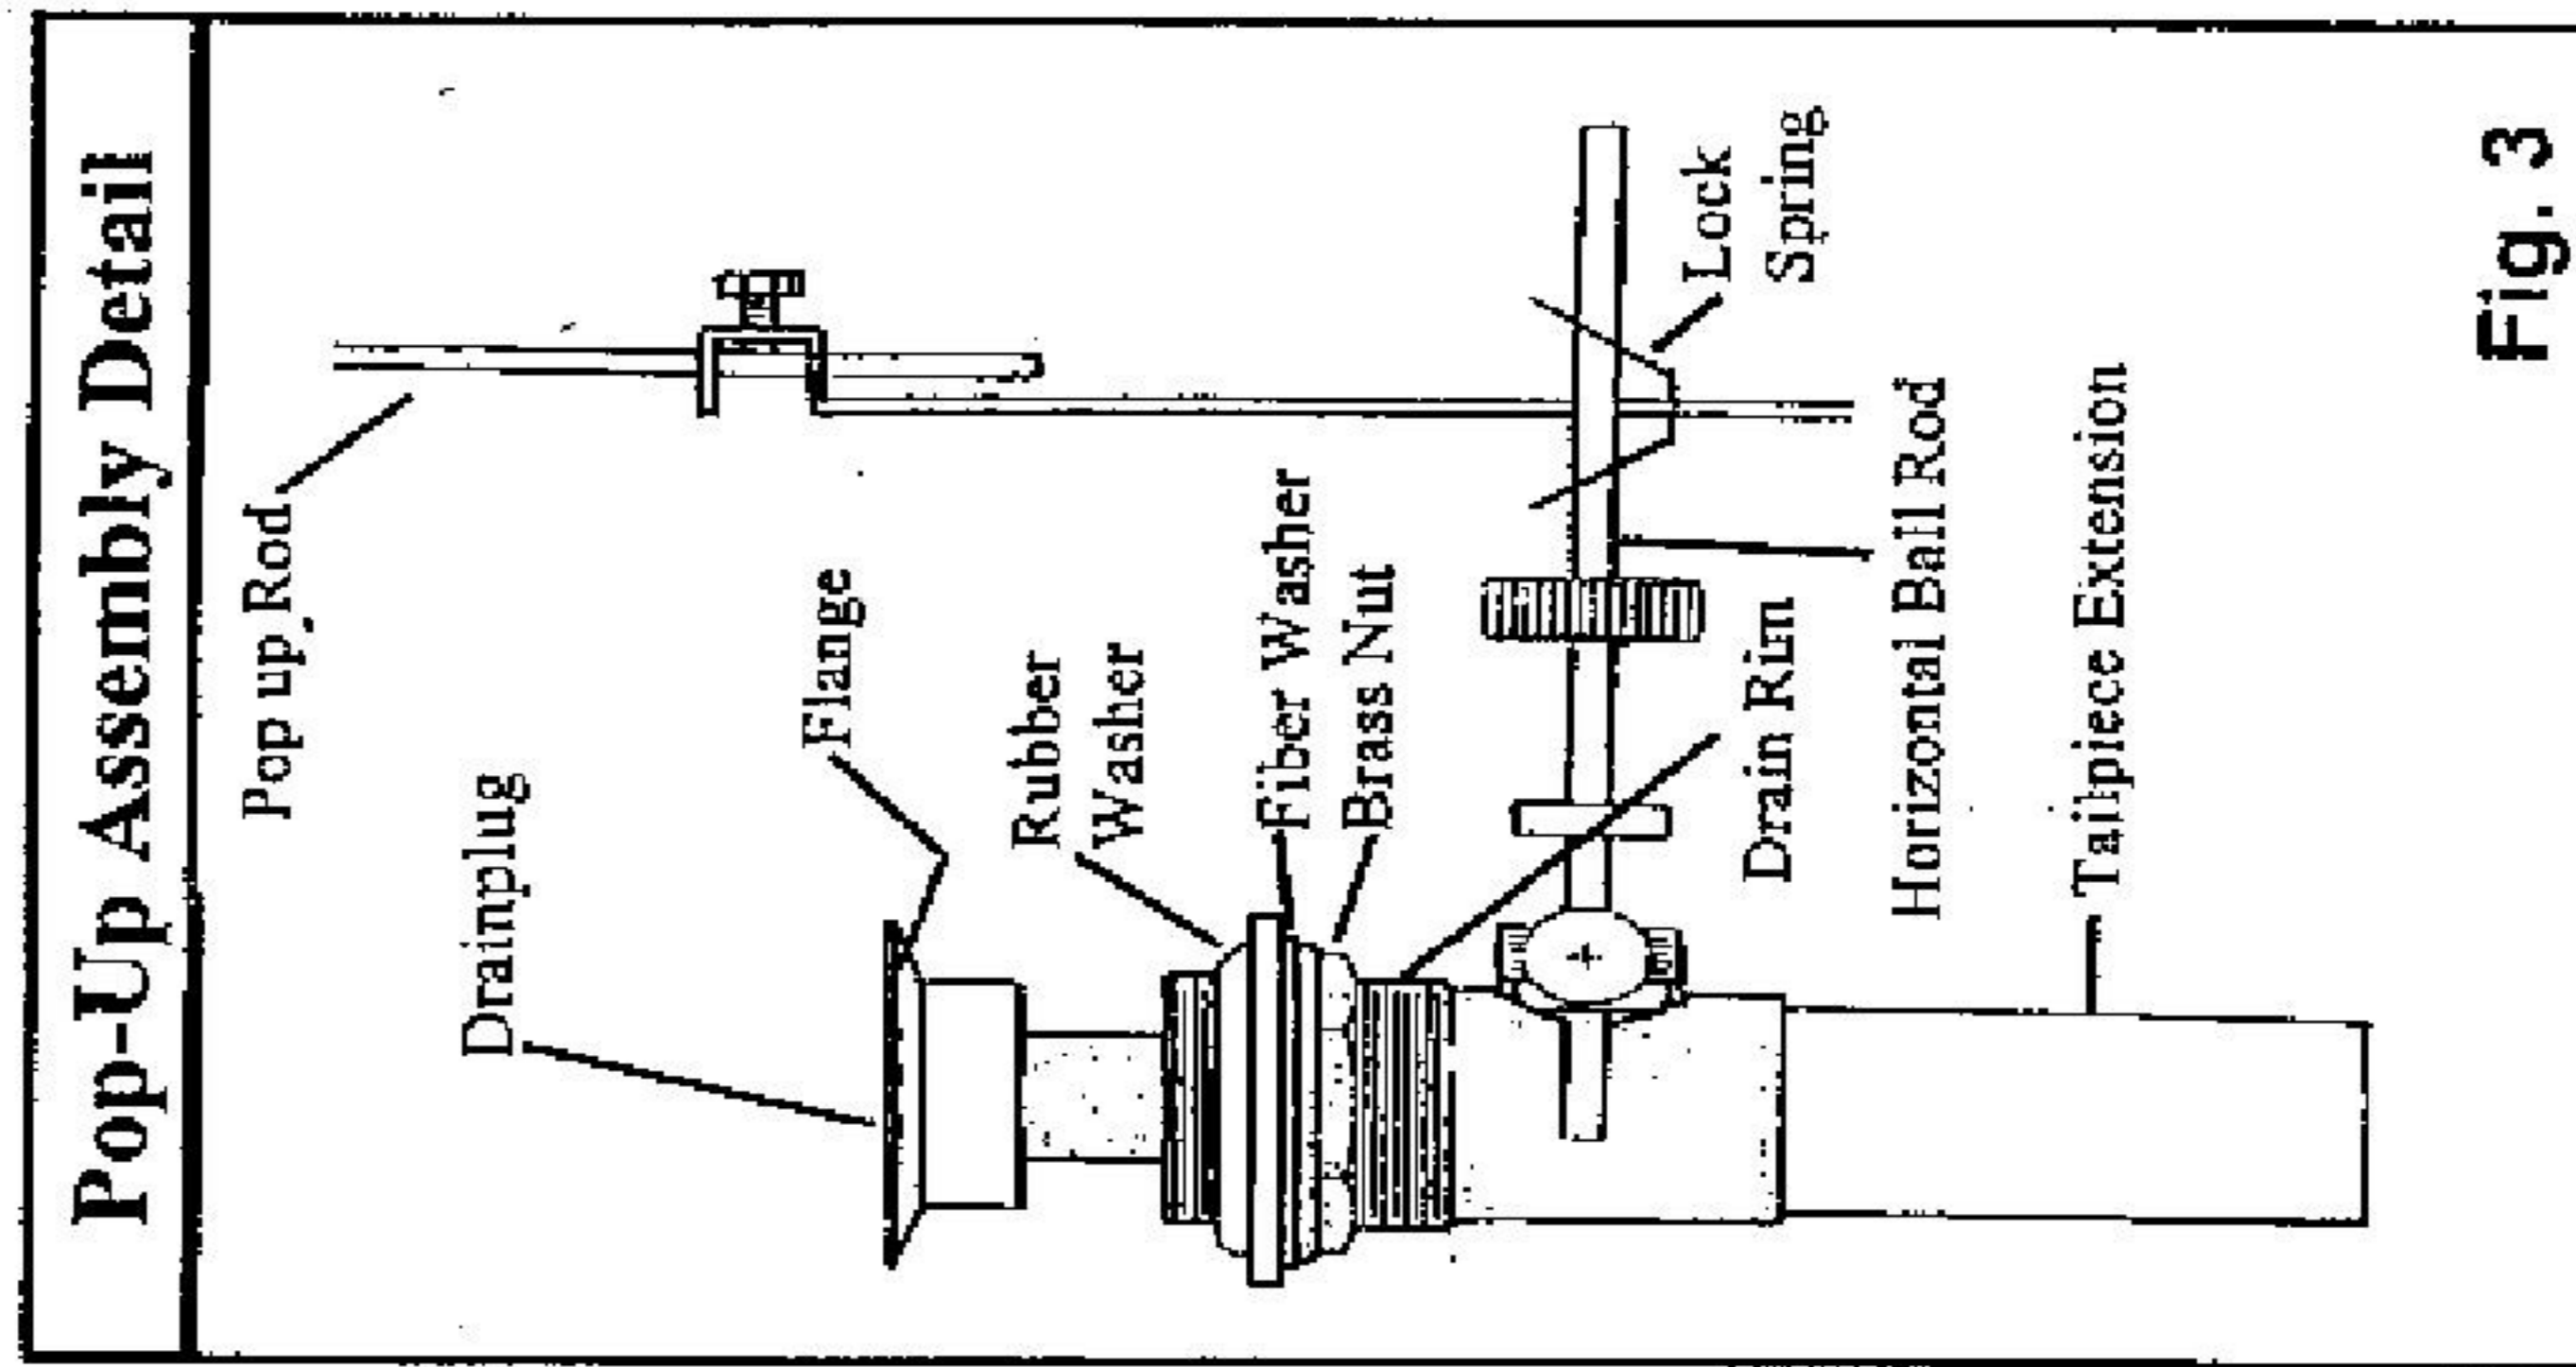


Fig. 3

IMPORTANT CLEANING NOTICE

To maintain your faucet use only mild soap and water. Never use acids, harsh abrasives or detergents.